

OPERATIONAL SAFETY AND ASSEMBLY INSTRUCTIONS



ADAPTABLE PIPE & CONDUIT CART

Models: ATC-5834PL-2R2S; *Base ATC cart with optional Jescraft Casters READ THESE INSRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. KEEP THIS MANUAL HANDY FOR FUTURE REFERENCE.



READ BEFORE BEGINNING ASSEMBLY

FAILURE TO UNDERSTAND AND FOLLOW ALL SAFETY RULES AND ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.



METAL CONDUCTS ELECTRICITY:

Do not use this equipment where contact may be made with power lines or other live electrical circuits.



DO NOT OVERLOAD:

This Cart is designed to support a maximum load of 1,000 lbs.



OPERATION AND SAFETY

- Do not use this equipment if you are in poor health, taking medications, drugs, or have been consuming alcohol, all of which may impair your ability to work safely on this product.
- Always use this cart in conformity with local or national legislation which applies.
- Inspect before use. Do not use if damaged. Check for missing parts.
- Examine thoroughly to make sure Cart is set up properly. If assembling
 or tightening fasteners, tighten all fasteners to the torque
 specified: Recommended Tightening Torque: 21 ft-lbs. Do not exceed
 27 ft-lbs. Do not overtighten overtightening can cause damage to the
 unit. Do not replace or substitute bolts, nuts, or other hardware that is
 of lesser quality than the hardware supplied by the manufacturer.
- All components must be complete, functioning properly and correctly assembled.
- Any incomplete part, missing part, or ill-fitting part should be replaced prior to use.
- Use the right product for the job. Do not modify the Cart and do not use the Cart for a purpose for which it was not intended.

- Do not exceed the maximum load capacity of 1,000 lbs.
- Always distribute objects on the Cart evenly and resting adequately on the tree bars. Uneven weight distribution could cause Cart tipping.
- Be aware of dynamic loading. Suddenly dropping or bouncing a load on the Cart may create, for a brief instant, an excess load, which may result in damage to the product and/or personal injury.
- This Cart must be used on solid flat surfaces.
- This Cart must be used on a firm surface that is free of pits, debris, holes or obstructions.
- Acids are corrosive and can seriously affect strength. Do not expose this
 Cart to corrosive substances.
- Never move a Cart with a worker within.
- Do not use powered devices to propel this Cart. Use extra caution near operating machinery.
- Do not modify this Cart or any of its components.
- Do not remove any labels from this Cart.



ALWAYS INSPECT BEFORE



ACIDS ARE CORROSIVE. DO NOT EXPOSE UNIT TO CORROSIVE SUBSTANCES



UNIT SHALL ONLY BE USED ON FIRM AND LEVEL SURFACES



CART MAXIMUM LOAD CAPACITY: 1,000 lbs.



UNEVEN WEIGHT DISTRIBUTION COULD CAUSE CART TIPPING



NEVER MOVE A CART WITH WORKER WITHIN



METAL CONDUCTS



MUST BE USED ON A FIRM SURFACE THAT IS FREE OF PITS, DEBRIS, HOLES OR OBSTRUCTIONS



SUDDENLY DROPPING OR BOUNCING A LOAD ON THE CART MAY CREATE AN EXCESS LOAD

All photos, drawings and depictions in this booklet are for reference purposes only and may differ from actual product. Refer to applicable OSHA, ANSI or CSA codes and regulations for the proper use of this equipment.