



OPERATIONAL SAFETY AND ASSEMBLY INSTRUCTIONS

MOBILE BAR CART

Models: MBC-8628PL-4K



READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT. KEEP THIS MANUAL HANDY FOR FUTURE REFERENCE.



READ BEFORE BEGINNING ASSEMBLY AND USE

FAILURE TO READ, UNDERSTAND AND FOLLOW ALL SAFETY RULES AND ASSEMBLY INSTRUCTIONS IN THIS MANUAL BEFORE ASSEMBLING, INSTALLING, USING OR SERVICING OF THE PRODUCT IS A MISUSE OF THE PRODUCT AND COULD RESULT IN SERIOUS INJURY OR DEATH. IF AFTER READING THE MANUAL YOU DO NOT UNDERSTAND AN INSTRUCTION, ASK YOUR SUPERVISOR OR EMPLOYER FOR CLARIFICATION.

JESCRAFT IS NOT LIABLE FOR ANY INJURY OR PROPERTY DAMAGE THAT OCCURS AS A CONSEQUENCE OF FAILING TO APPLY EITHER: a) THE INSTRUCTIONS IN THIS MANUAL; OR b) INFORMATION PROVIDED ON LABELS AFFIXED TO THIS PRODUCT. NEITHER IS JESCRAFT RESPONSIBLE FOR ANY CONSEQUENTIAL DAMAGES OR INJURYS SUSTAINED AS A RESULT OF FAILING TO EXERCISE SOUND JUDGMENT WHILE ASSEMBLING, INSTALLING, USING OR MAINTAINING THIS PRODUCT.



METAL CONDUCTS ELECTRICITY:

Do not use this equipment where contact may be made with power lines or other live electrical circuits.



DO NOT OVERLOAD:

This Cart is designed to support a maximum load of 4,000 lbs. DO NOT exceed this maximum rated load.



OPERATION AND SAFETY

- Do not use this equipment if you are in poor health, taking medications, drugs, or have been consuming alcohol, all of which may impair your ability to work safely on this product.
- Always use this cart in compliance with local or national laws, regulations, codes, and any other standards enforced in the location where the product is used. This is the responsibility of the owner/user.
- Inspect product before each use. Do not use if damaged or if any unusual noise or movement is observed. Check for missing parts.
- Examine thoroughly to make sure Cart is set up properly. If assembling or tightening fasteners, tighten all fasteners to the torque specified: Recommended Tightening Torque: 21 ft-lbs. Do not exceed 27 ft-lbs. Do not overtighten – overtightening can cause damage to the unit. Do not replace or substitute bolts, nuts, or other hardware that is of lesser quality than the hardware supplied by the manufacturer.
- All components must be complete, functioning properly and correctly assembled. If a malfunction occurs, remove the product from service and notify your supervisor and maintenance personnel about the issue.
- Any incomplete part, missing part, or ill-fitting part should be replaced prior to use.
- Keep the product clean & dry. Lubricate moving parts. Proper use, maintenance, and storage are essential for this product to function properly.
- Use the right product for the job. Except for addition of stakes as specified, do not modify the Cart and do not use the Cart for a purpose for which it was not intended.
- Steel stakes consisting of 1" pipe/round shall not exceed 33.5" in length. Wood stakes consisting of 2"x 4" lumber shall not exceed 30" in length.
- Do not exceed the maximum load capacity of 4,000 lbs.
- Always distribute objects on the Cart evenly and resting adequately on all three bottom cradle channels. Uneven weight distribution could cause Cart tipping or loaded materials to fall out of cradle channels.
- Be aware of dynamic loading. Suddenly dropping or bouncing a load on the Cart may create, for a brief instant, an excess load, which may result in damage to the product and/or personal injury.
- This Cart must be used on solid flat surfaces.
- This Cart must be used on a firm surface that is free of pits, debris, holes or obstructions.
- Acids are corrosive and can seriously affect strength. Do not expose this Cart to corrosive substances.
- Never move a Cart with a worker within.
- Do not use powered devices to propel this Cart. Use extra caution near operating machinery.
- Do not modify this Cart or any of its components.
- Do not remove any labels from this Cart.
- Always use this product in accordance with the instructions in this manual and consistent with any training relevant to machines, devices, materials, etc. used in conjunction with this product.



OPERATIONAL SAFETY AND ASSEMBLY INSTRUCTIONS



ALWAYS
INSPECT
BEFORE
USE



CART MAXIMUM LOAD
CAPACITY: 4,000 lbs.



METAL CONDUCTS
ELECTRICITY



ACIDS ARE CORROSIVE.
DO NOT EXPOSE UNIT
TO CORROSIVE
SUBSTANCES



UNEVEN WEIGHT
DISTRIBUTION COULD
CAUSE CART TIPPING



MUST BE USED ON A FIRM
SURFACE THAT IS FREE OF
PITS, DEBRIS, HOLES OR
OBSTRUCTIONS



UNIT SHALL ONLY BE
USED ON FIRM AND
LEVEL SURFACES



NEVER MOVE A CART
WITH WORKER WITHIN



SUDDENLY DROPPING OR
BOUNCING A LOAD ON THE
CART MAY CREATE AN
EXCESS LOAD

All photos, drawings and depictions in this booklet are for reference purposes only and may differ from actual product. Refer to applicable OSHA, ANSI or CSA codes and regulations for the proper use of this equipment.